#81112 Associated B6 & B6D Rear A-arms

Installation Notes: Swapping your stock A-arms with your new **RPM** versions is as simple as removing and replacing the stock A-arms with only one easy difference. **RPM** A-arms do not have a hole for an offset screw to retain the outer hinge pins. Instead, we use an in-line screw. Slip the hinge pin in Install Hinge Pin place, then follow the hinge pin with the included #6 from this side Pan Head Screw. Caution: Do not overtighten the screw Note: The outer hinge pin will only go in from one side of the A-arm. Do not try to force it in from the wrong side. The correct side is from the #6 Pan Head conical side of the arm Screw